




1. Take off fender and door.



2. With the door closed, take off OEM hinges.



3. With the door still closed, put the main hinge up against the door as shown in the image.

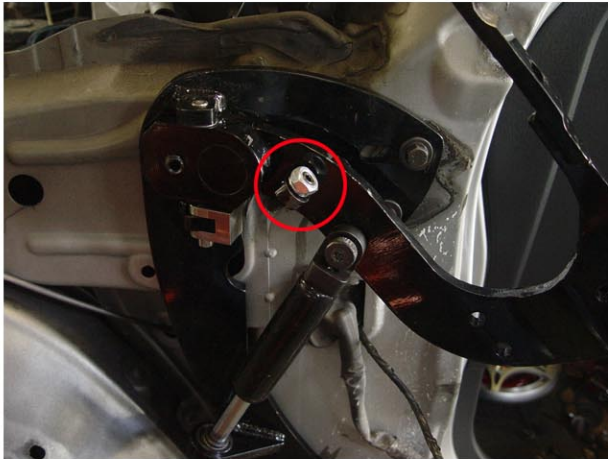

4. Door adjusting bolt (will allow you to adjust the door height once installation is complete)



5. When installing the gas shock, insert the pin in the bottom part first.



6. Install the hinge and door.